


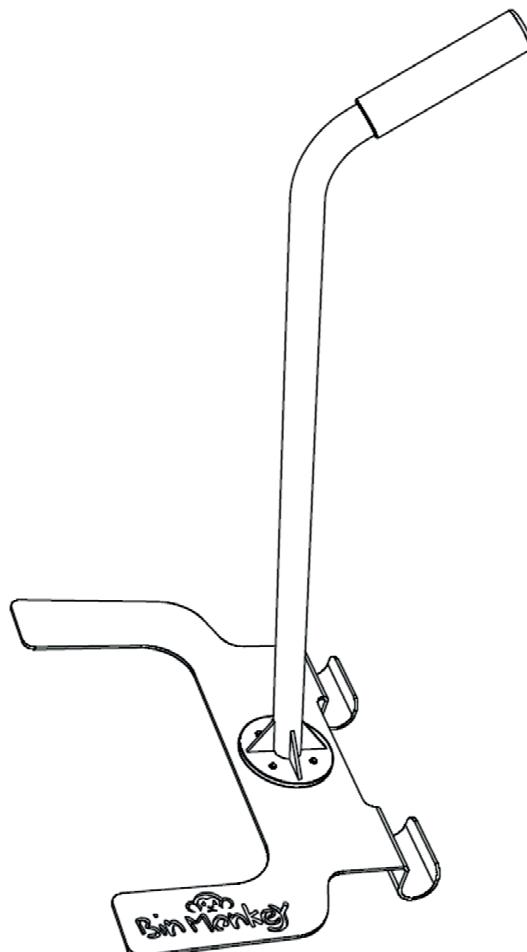

INSTRUCTIONS



PARTS SUPPLIED:

- Bin Monkey handle assembly x 1
- Bin Monkey plate x 1
- Bin Monkey accessory pack x 1
 - a. Handle x 1
 - b. M5 x 10mm Stainless Steel Csk Machine Screws x 4
 - c. Bin Monkey 'Bin Sticker' x 1
 - d. Assembly Instructions x 1

ASSEMBLY (BIN MONKEY):

Step 1. Remove contents from the packaging.

Step 2. Screw the plate and handle assembly together using the M5 x 10mm csk machine screws supplied. See Fig.1.

Note: The M5 x 10mm screws have a special adhesive added to prevent them coming undone.

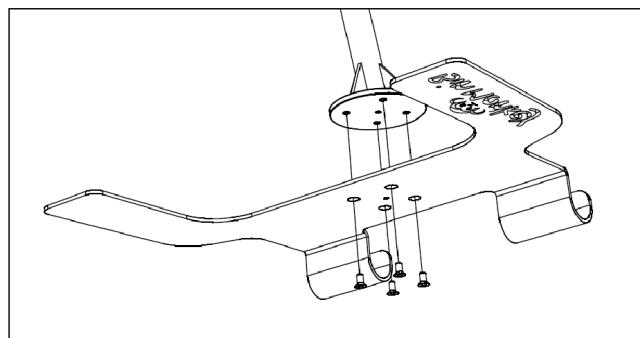


Fig.1

Step 3. Fit the rubber handle onto the handle assembly. See Fig.2.

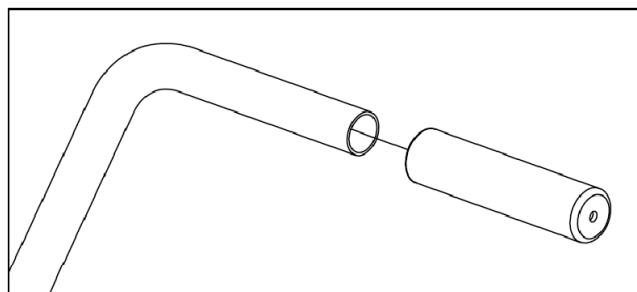


Fig.2

USING YOUR BIN MONKEY:

Step 1. Hook onto the rear of your bin. See Fig.3

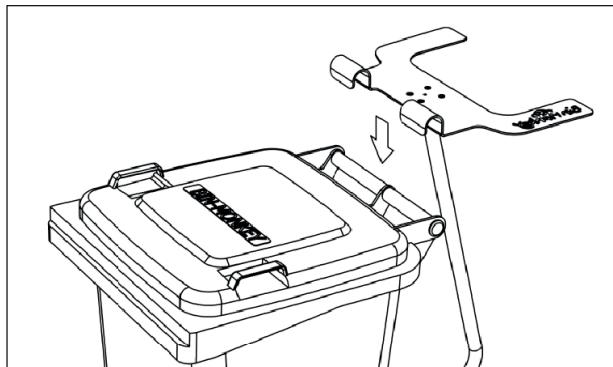


Fig.3

Step 2. Lift the handle to 90° and then pull backwards. See Fig.4.

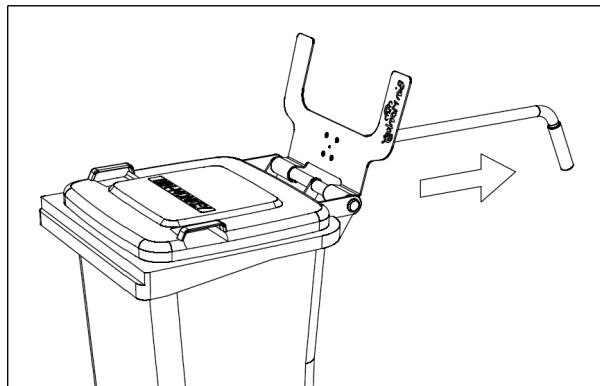


Fig.4

Step 3. Your Bin Monkey is now ready to use. See Fig.5.

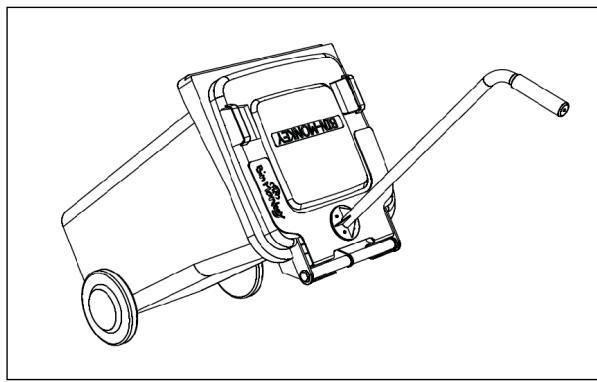


Fig.5

LIMITATIONS:

Bin Monkey makes no express warranties or representations other than is set out in this warranty. The repair or replacement of the product or part is the absolute limit of Bin Monkeys liability under the express warranty. Our goods come with guarantees that cannot be excluded under Australian consumer law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

LOCATION:

Head office:

PO Box 698, Mount Martha, Vic 3934

T: +61 436 302 654

E: dean@binmonkey.com.au

W: binmonkey.com.au

PROOF OF PURCHASE:

Proof of purchase must be retained. Please attach your receipt and keep in a safe place for future reference.

WARRANTY:

Subject to the exclusions below, Bin Monkey warrants:

- ***For 12 months from date of purchase:*** the repair or replacement, in its discretion, of any product that fails to operate correctly due to faulty workmanship or defective materials.

The benefits of this warranty are in addition to the non-excludable rights and remedies imposed by Australian State and Federal legislation.

WARRANTY CLAIMS:

To make a warranty claim please contact your place of purchase or our head office with alleged defect. Ensure you have retained your receipt as proof of purchase. Where necessary Bin Monkey will arrange an inspection of your product.

You must bear all costs associated with making a warranty claim, including returning the product or components by freight. Where deemed your warranty claim is valid, we will bear all costs associated with repairing or replacing the defective product.

WARRANTY EXCLUSIONS:

The warranty does not cover:

- Defects caused through misuse or abuse.
- Incorrect adjustments or unauthorised repairs.
- Defects caused by incorrect installation.
- Product damage or deterioration due to abnormal environmental conditions including extreme coastal, storm damage, fire, wind, humidity, pressure, stress or similar.
- Powder coat deterioration caused by exposure to sea air where the product is installed in a coastal environment.
- Defects caused by normal wear and tear.